
De Projectinrichter


www.deprojectinrichter.com 088 - 650 12 34


M2 Monitor Arm


Dimensions

(in millimeters)

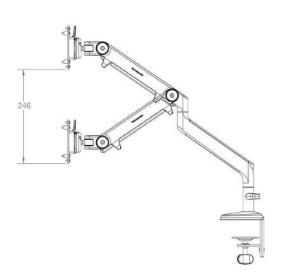

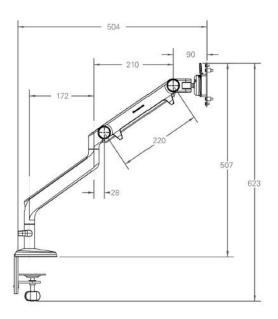

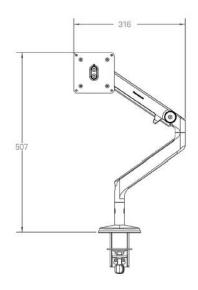





STEP 6: FRICTION ADJUSTMENTS

M2 INSTALLATION HARDWARE

- a. If your monitor is particularly heavy, or after prolonged use, the Ball Joint Swivel/Tilt Mechanism may require increased friction. This can be achieved by tightening the (3) Ball Joint Friction Screws (A) using Hex Key C.
- **b.** Your monitor should move up and down easily and should stay in place once adjusted. If it is difficult to adjust or moves without assistance, it is not properly counterbalanced.

Use Hex Key C to turn the screws located within the half-dollar-size friction discs (B) located on the side of the M2. Turn each screw counterclockwise to decrease friction when the monitor is difficult to adjust. Turn each screw clockwise to increase friction when the monitor will not stay in place. Be sure to apply the same amount of rotation to each screw.



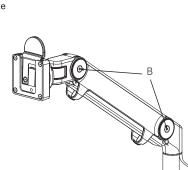










Base Stem Screw










4 Extended VESA Bracket Screws

4 Plastic Spacers



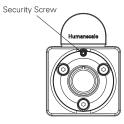


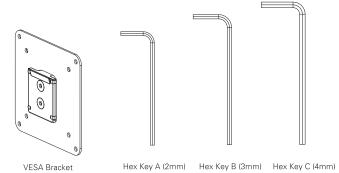







Bolt-Through Plate





Clamp Mount

(Humanscale)_®

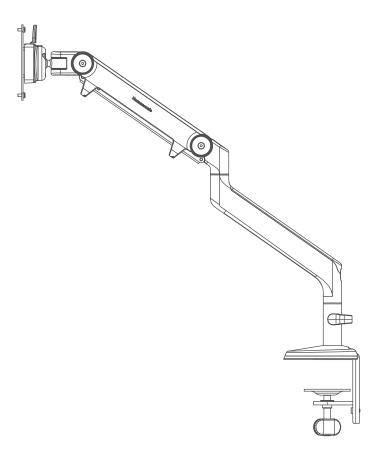


M2 Installation **Instructions**

- a. For installation on open edge of work surface:
- i. Slide Mount (A) against work surface edge and fully tighten Clamp Screw (B).

Note: If work surface is too thin to attach Mount at default setting, proceed to Step c.

ii. Proceed to Step 2.



i. Insert Mount (A) through grommet (B) and against work surface edge. Position Mount so that front of Base faces the user. Fully tighten Clamp Screw.


Note: If Mount will not fit through grommet hole, proceed to Step c, mounting on inside edge of grommet hole.


ii. Proceed to Step 2.

- c. For installation on work surface positioned against a wall or panel:
- i. Attach arm to Base Stem following Step 2 instructions before proceeding below.
- ii. Detach the Bottom Clamp (A) from the Top Bracket (B) by loosening Bracket Screws (C) with Hex Key C.
- iii. Position the Top Bracket against work surface edge.
- iv. Underneath the work surface, reattach the Bottom Clamp to the Top Bracket using the Bracket Screws.


Note: There are two sets of holes for different surface thicknesses. Use the set of holes that allow the Clamp Screw to fully


- v. Fully tighten Clamp Screw (D).
- vi. Proceed to Step 2.









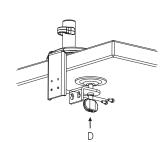

BOLT-THROUGH MOUNT


- a. If both desk mount options were purchased, begin with Step i below. Otherwise, proceed to Step iii.
- i. Detach the Bottom Clamp (A) from the Top Bracket (B) by loosening Bracket Screws (C) with Hex Key C.
- ii. Using an M6 Hex Key (not included), remove Mount Attachment Screw (D) from Mount.




iii. Drill 1/2" hole through work surface in desired location.

Note: The Bolt-Through Mount may also be accommodated by a larger drilled hole or grommet hole up to 3" in diameter for cable management (A) behind the Arm and through the hole to the underside of the work surface.

- iv. Position the M2 Base over the work surface hole (B)
- v. Align Bolt-Through Plate, foam side up, under the work surface. Pass the Bolt-Through Bolt (C) through the hole in the plate and screw into M2 Base. Using an M8 Hex Key (not included), fully tighten until
- vi. Proceed to Step 2




STEP 2: ATTACH ARM TO BASE STEM

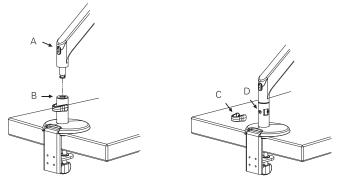



- a. Insert M2 Arm (A) into the Base Stem (B).
- b. Remove Cable Clip (C) located on Base Stem and using Hex Key B tighten the Base Stem Screw (D) to fully secure Arm to Base. Replace Cable Clip once Arm is secure.

STEP 3: ATTACH VESA BRACKET TO MONITOR

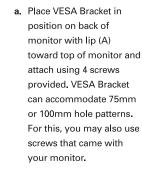




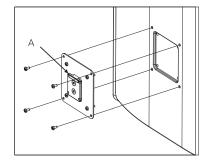


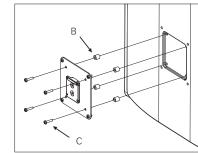

STEP 4: ATTACH MONITOR TO ARM


- a. Slide VESA Bracket (A) into Ball Joint until it clicks.
- b. To remove, depress Quick-Release Tab (B) and slide monitor up and away from Arm.
- c. If security is required, tighten Security Screw (C) using Hex Key A.

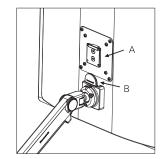

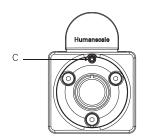


STEP 5: CABLE MANAGEMENT


a. Route power and monitor cables through the cable clips on the M2's upper link (A).

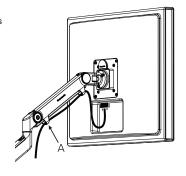


- b. Slide the plastic cover on the lower link downward until it disengages, then remove (B).
- c. Route cables inside the lower
- d. Place the plastic cover back onto the lower link and slide upward until it clicks into place (D).

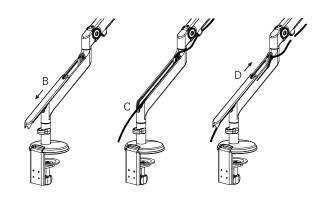

e. Remove the cable clip on the base stem (E) then reattach over the cables to secure them in place (F).

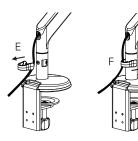



www.deprojectinrichter.com 088 - 650 12 34

